

NetFLOW^{IP}

Quick Configuration Manual For IP Cameras/Video Servers



Net FLOW IP

Cameras/Video Server User Manual

Factory Setting

Initial IP Address: **192.168.1.2**

Gateway: **192.168.1.1**

Initial User Name & Password are:

Login: **root**

Password: **pass**

2 ways to configure IP cameras/server

METHOD 1

- 1. Connect the camera to USB Port with the wire supplied.**
- 2. No power to video server or camera is necessary.**
- 3. Login using default User Name and Password.**
- 4. The Wizard will guide through Setup.**

METHOD 2

- 1. Using Internet Explorer Login to the IP Cameras/Server using default IP Address.**
- 2. Configure the IP Cameras/Server using on screen menu.**
- 3. Vista users must disable UAC (User Access Control) before connecting to the IP Cameras/Server.**

www.netflowip.com